


# HS13B-1

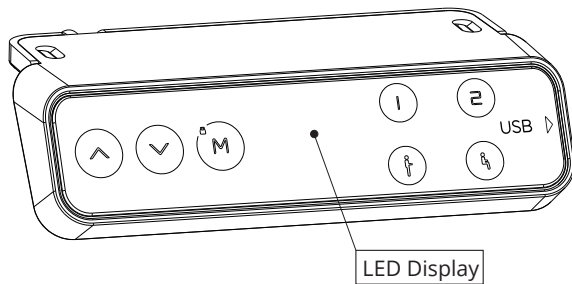

- ^ - Adjust the desk upwards
- ∨ - Adjust the desk downwards
- 1 - Position 1, first height position saved by the user
- 2 - Position 2, second height position saved by the user
- † - The display shows "3", which means the position of the standing height the user saved.
- ‡ - The display shows "4", which means the position of the standing height the user saved.
- M - Height saving button, for height memory function; Child lock: for security
- USB charging function - output: QC2.0/QC3.0, 5.0V / 9.0V / 12.0V, ±5% Current 1.0A

## Height Adjustable Function:

- Press the "^" or "∨" button to adjust the height. The LED display shows the current height.

## Child lock function:

- To unlock or start the child lock, you need to press and hold the M button for about 5 seconds.
- When the child lock is turned on, the child lock blue indicator light (∨ and M directly above) lights up

## Height Memory Function:

- Press UP or DOWN button and adjust the height to the desired height.
- Press "M" to save the height, and the screen will display "5-"; Press "1", "2", or "†", "‡" then, that is, save the height to the corresponding position 1 or 2, 3, or 4, which will show in the display screen as "5-1", "5-2", or "†", or "‡";
- Press "1", "2" and "†", "‡" button directly to automatically adjust the memory height you saved.

## Anti-collision sensitivity adjustment (only for [CB38M2A (IB) -1]):

- Press and hold the "^" "∨" button for 5 seconds at the same time to switch the sensitivity. Switch one file for 1 time and divide it into 4 files (A-3, A-2, A-1, A-0);
- The display shows "A-0", the anti-collision function is off; the display shows "A-1", low sensitivity; Display shows "A-2", medium sensitivity; display shows "A-3", high sensitivity; (factory default is A-3);
- During height adjustment, when tabletop comes in contact with another object, it instantly stops and reverses to avoid damage.

## Troubleshooting:

- Reset: When the LED shows "H5f", press "∨" button until the desk reaches its lowest height and rebounds to stop, it means the reset has been finished.
- When it doesn't work and the LED shows "E01" or "E02", please retry 18 mins later.
- If the "∨" button doesn't work, please check the cable connection and then cut off the power for at least 10 seconds. Reconnect to the power and press "∨" button to start the reset process when it shows the "H5f".
- If all these above process are inefficient, plz contact our customer service.

## Modify minimum height on the display

When the height value displayed on the standing desk does not match the actual height value, you can modify the display minimum height to adjust.

- Long press „M + ^ " for 3 seconds to enter the state of displaying the minimum altitude modification.
- The current displayed height value is flashing on the LED. Press the up button to increase the value, which means how much the minimum height is increased, and press the „ ∨ " to decrease the value, which means how much the minimum height is lowered. After the adjustment is completed, short press the „M" key to confirm. At this time, the buzzer will beep twice to remind the user, indicating that the minimum height of the display is successfully modified.
- You can repeat the modification according to the above two steps.

## Set the lower limit height and upper limit height of standing desk operation

- Set the lower limit height  
Adjust the standing desk to the desired height, long press „M+1" button for 3 seconds to set the current position as the lower limit of operation height. When the setting is successful, the buzzer will beep twice. After the setting is completed, the standing desk will not be able to adjust to a position lower than the lower limit height.
- Set the upper limit height  
Adjust the standing desk to the desired height, long press „M+2" button for 3 seconds to set the current position to the highest height of the lifting column. When the setting is successful, the buzzer will beep twice. After the setting is completed, the standing desk will not be able to adjust to a position higher than the upper limit height.
- Clear the lower limit height and upper limit height  
Long press „M+ ∨ " for 3 seconds to clear the lower limit height and upper limit height. When the setting is successful, the buzzer will beep twice.

## Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.